



WAKE

Installation Instruction

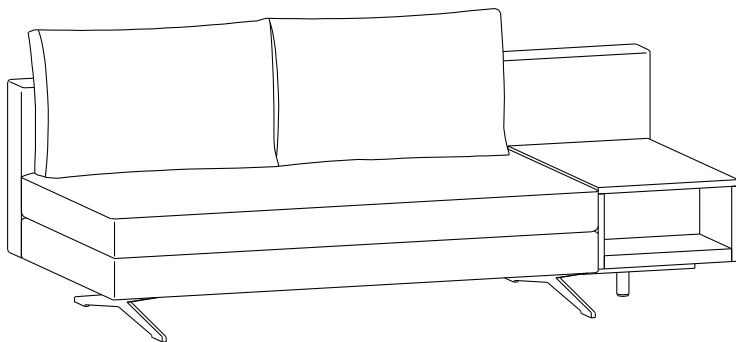


CAMERICH

M8X30mm



4X

M8X45mm




8X






D35X125mm





1X








M5

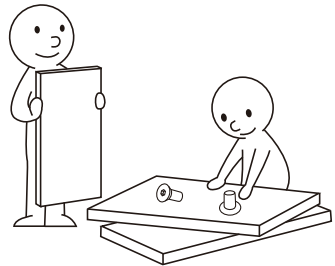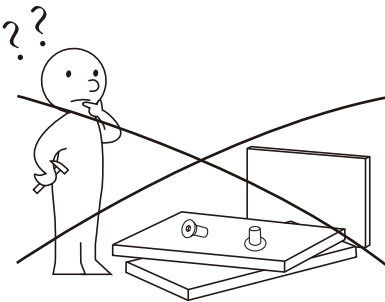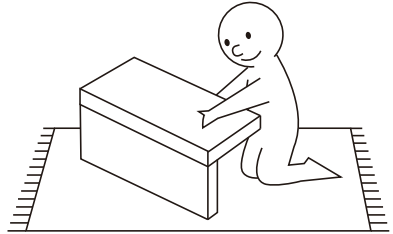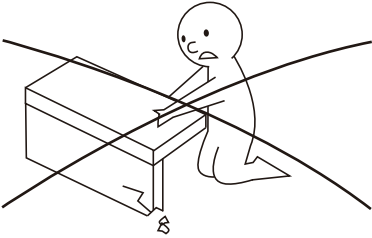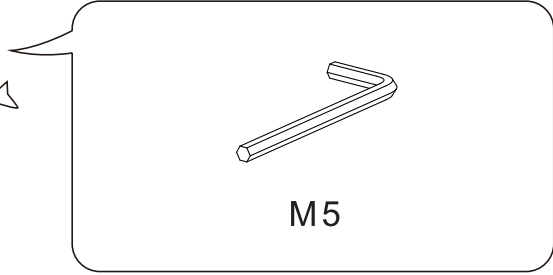

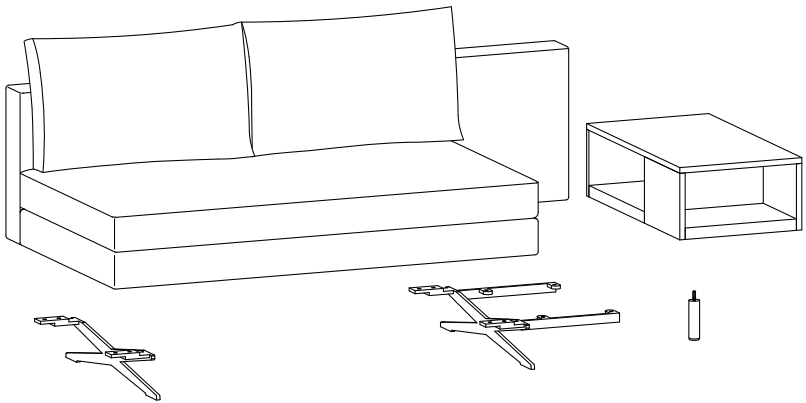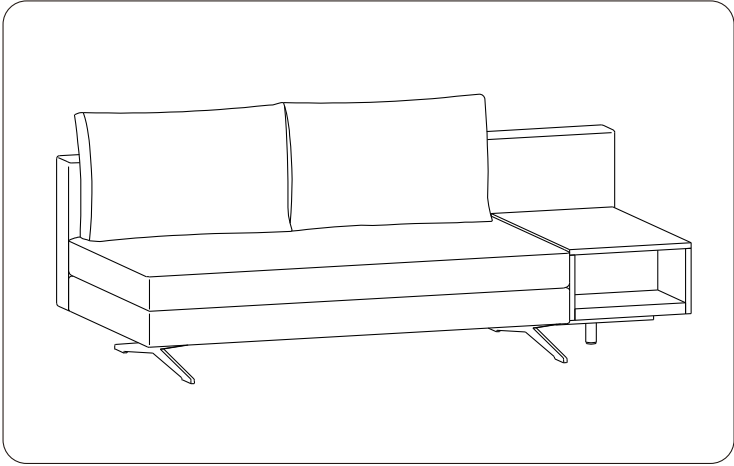

C07D0231.

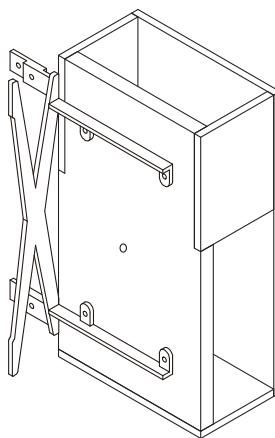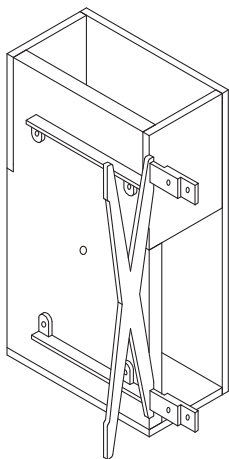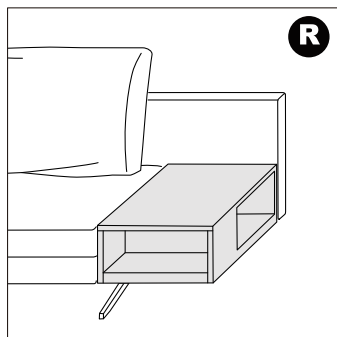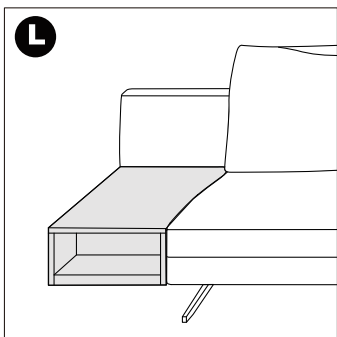



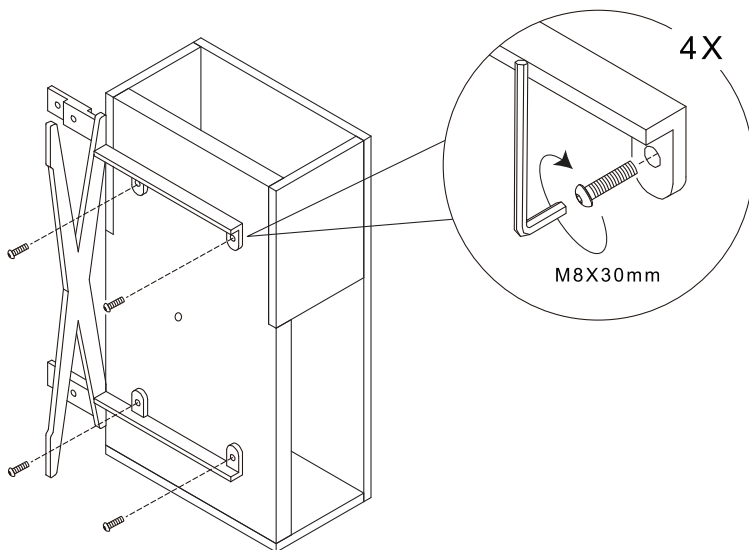










D35X125mm




1X

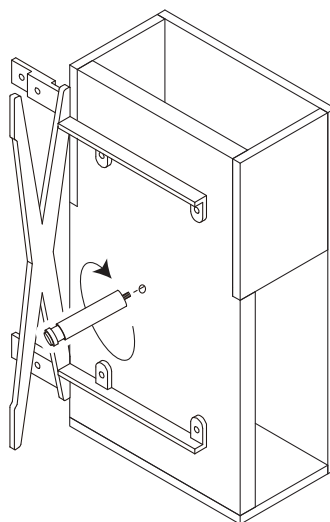

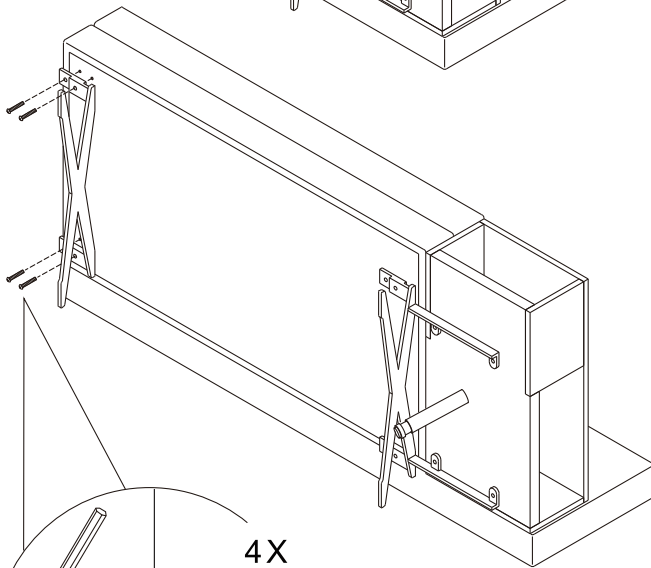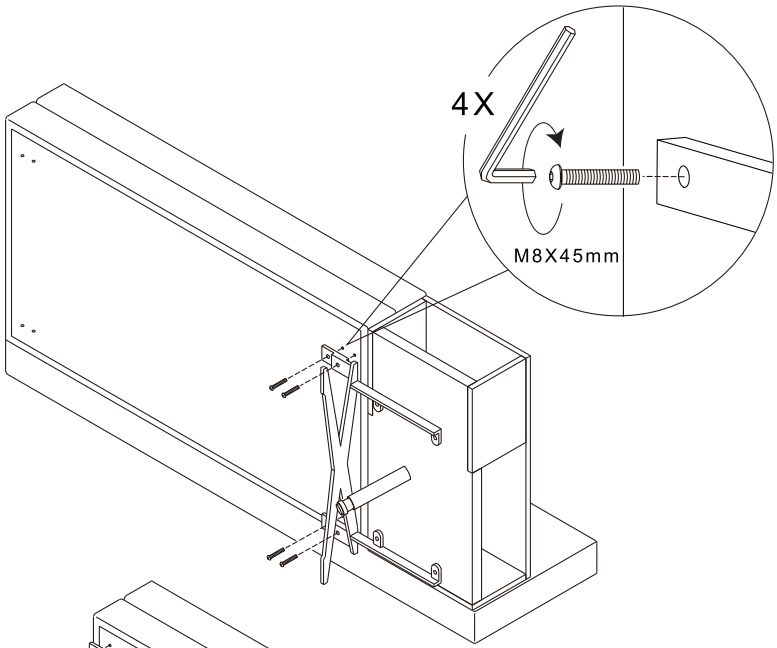

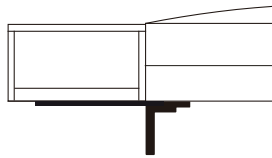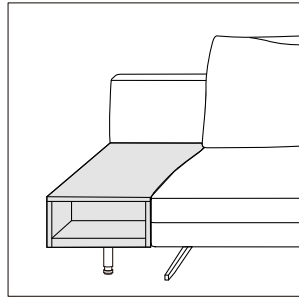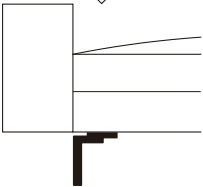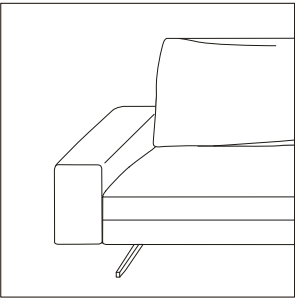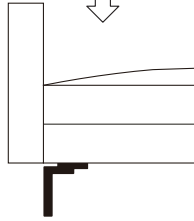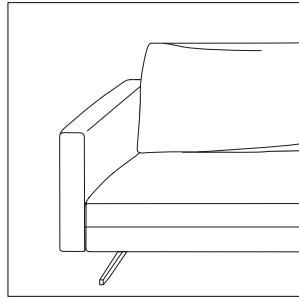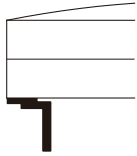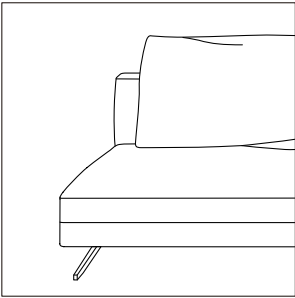

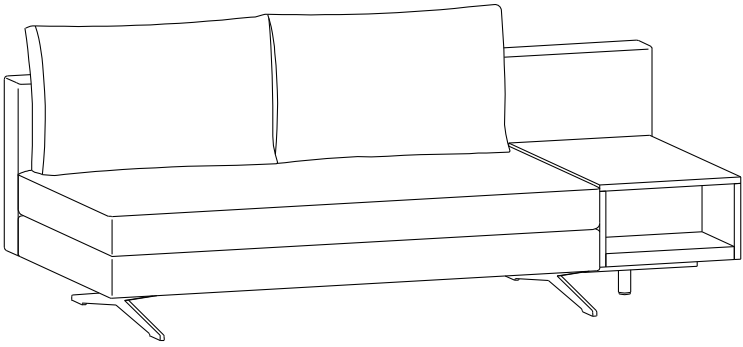



CAMERICHfurniture



camerich_official